



1 What's in the box?



DivX Connected device

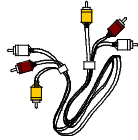

A/V composite cable

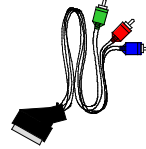


SCART component cable



HDMI cable



CAT-5 ethernet cable

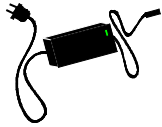


Power cord with AC adapter




Wireless antenna



 Remote control



Quick Setup Guide

 

2 AAA batteries
(for remote)

2 Install the DivX Connected software

Minimum system requirements:

- Windows Media Center Edition, XP Home Edition or XP Professional Edition
- Pentium 4 1.6 GHz CPU
- 512 Mbytes RAM
- 50 Mbytes available hard disc drive space
- 10/100 Ethernet , or 802.11g or 802.11b network adapter

Software installation:

- Visit the DivX Connected Beta Community (<http://labs.divx.com/connectedcommunity>) on DivX Labs
- Download and install the latest version of DivX Connected software
- Run the DivX Connected Setup Wizard (if it doesn't start after installation, double click the DivX Connected icon on your desktop)




DivX Connected™


3 Connect the DivX Connected device to your network

Note: This guide assumes that you already have a PC connected to your home network. If you are installing a network for the first time, please follow the network installation instructions for your router first.

1. Attach the wireless antenna to the back of the device (even if you're not using wireless, you don't want to lose it, do you?).
2. If you want to connect the device using wired Ethernet, connect a Cat-5 cable between the device and router, as shown in the diagram below.
3. For a wireless connection, make sure the antenna is attached and have your network name (or SSID) and your encryption key (if needed) available.

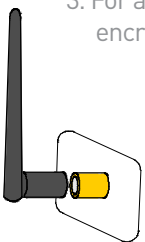

Attach the wireless antenna to your DivX Connected device

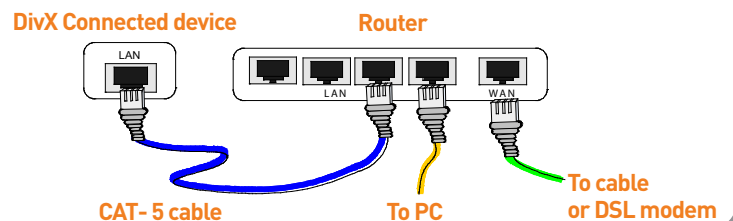


4 Connect the DivX Connected device to your TV

GOOD


Standard Definition TV connection

Using the A/V composite cable, connect the DivX Connected device to your TV.

DivX Connected device

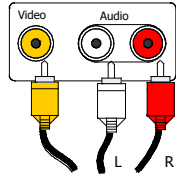

TV

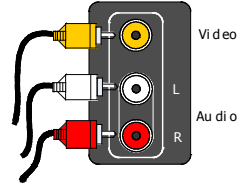

- or -


BETTER

SCART Component TV connection


Using the SCART component cable, connect the DivX Connected device to your TV.

Using audio connection cables, connect the audio on the DivX Connected device to the audio on your TV.

DivX Connected device

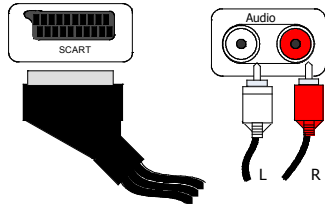

TV

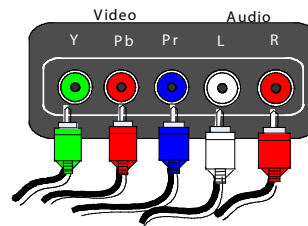

- or -


BEST

HDMI TV connection


Using the HDMI cable, connect the DivX Connected device to your TV.

If your TV doesn't receive audio through the HDMI cable, connect the audio cables.

DivX Connected device

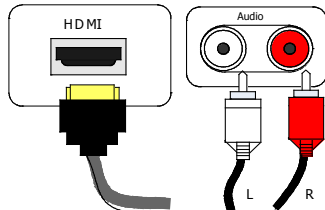

TV

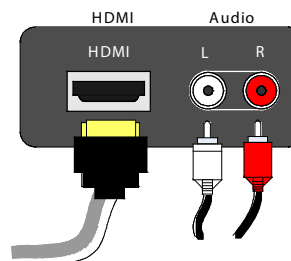

For other connections not shown here, please refer to the DivX Connected User Guide.

5 Power on the DivX Connected device

DivX Connected device



A Connect the power cord to the device and power source

B Turn on the TV


C Turn on the device by pressing the power button 

If you don't see the language selection screen, make sure your TV is set to display the correct video input. The method for changing the TV input depends on the model, but your TV may have an "Input" or "A/V" button on the TV or on the remote control to select various inputs.

6 Configure the DivX Connected device

Follow the on-screen instructions for configuring the DivX Connected device. First select your language from the list using the **Up** or **Down** arrow keys on the remote control. Use the **Right** arrow key to advance to the next setup screen until all required items are configured. To return to a previous screen, press the **Left** arrow key.

7 Using the remote control

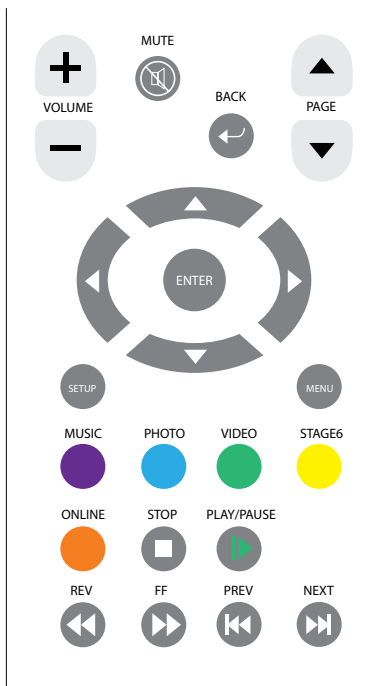

- Press the **Arrow** buttons to move around the page or to go to the next (**Right**) or previous (**Left**) screen
- Press the **Enter** button to select an item
- Press the **Back** button to go back to the previous screen
- Press the **Menu** button to display additional options on a screen
- Press the **Setup** button to configure the device
- The **Arrow** and **Enter** buttons also control trick modes during video playback
- Review the **Navigating in Connected** section of the user guide for more information about navigating each type of media

8 Troubleshooting

No power

Check that the AC power cord is plugged into both the power receptacle and the AC adapter. Check that the power jack is plugged securely into the back of the device.

Check the connections to the TV and make sure all plugs are firmly in place.

No picture

Check your TV manual to determine how to get the video input you've connected to the DivX Connected device to display on the TV.

No sound or distorted volume

Adjust the volume on the TV or device. Check that the audio connections are going to the correct input source on the TV. TVs with more than one video input usually have separate audio inputs as well.

Remote control does not work

Make sure existing batteries are properly installed or try new batteries.

Move closer to the DivX Connected device and point the remote directly at its front panel.

If this doesn't help, please visit us online at <http://labs.divx.com/connectedcommunity>. Search the forums to see if other users can help you and give us your feedback.



Questions? Visit us online at <http://labs.divx.com/connectedcommunity> and give feedback.

© 2007. All rights reserved. DivX, Inc.

DivX®, DivX Connected™, Stage6™ and associated logos are trademarks of DivX, Inc.

The information contained in this document is subject to change without notice.